
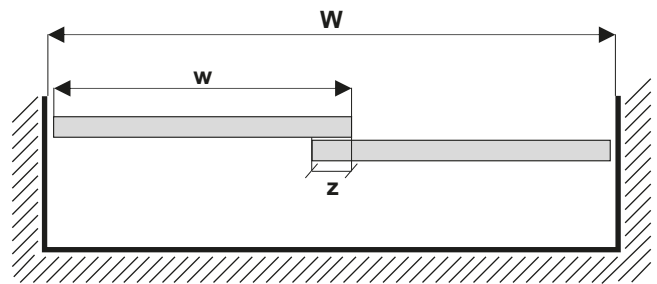


**COMPONENTS**

Track START II	Set Simple START		
	x2	x2	x2
			x16
			x1


Length: 1.5 m, 2.0 m, 2.5 m, 3.0 m, 4.0 m, 6.0 m

Dimensions of opening

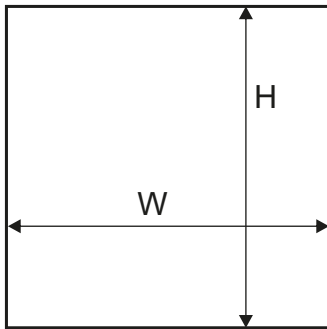


door height	- h	$h = H - 13 \text{ mm}$
door width	- w	$w = (W + Z) : N$

number of doors	- N	2	3
total overlap	- Z	40 mm	80 mm

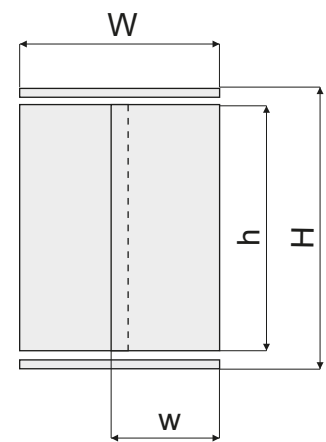

visual design - 4 wings	
	$w = (W + 120) : 4$
	$w = (W : 2 + 40) : 2$

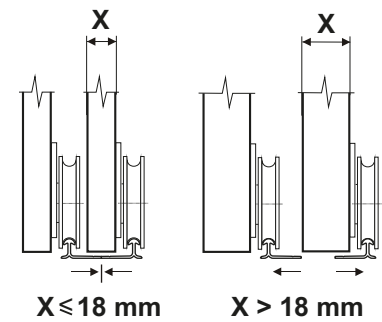

Installation of stopper

